



Annual Change + 0.2°E
VAR 6° E 2020

Taxi to stand 9
only via ZL

Taxi to stand 10
only via ZN

Taxi to stand 20
only via ZK

Taxi to stand 19
only via ZH

Taxi to stand 31
via ZE

ARRIVAL

The normal taxi-route procedure is clockwise taxiing where parallel taxiways are established. Pilots will receive instruction to change frequency between 121.705, 121.930 and 121.980 when crossing the area boundaries of Arlanda Ground. Depending on RWY's in use the areas of responsibility of Arlanda Ground vary.

ACFT will receive first GND frequency to contact from TWR.

LEGEND

- Asphalt
- Buildings
- Water surface
- TWY bridge
- Communication borders
- Manoeuvring area

