VISUAL APPROACH CHART - ICAO 1:250000 1 0 1 2 3 4 5 km 1 0 1 2 3 NM	AD ELEV 17 FEET ELEV and ALT in ft HGT in ft above AD ELEV TA 5000 AMSL	SUNDSVALL TOWER 129.555 118.105 SUNDSVALL ATIS 127.405	AD 2 ESNN 6-1 SUNDSVALL-TIMRÅ SWEDEN

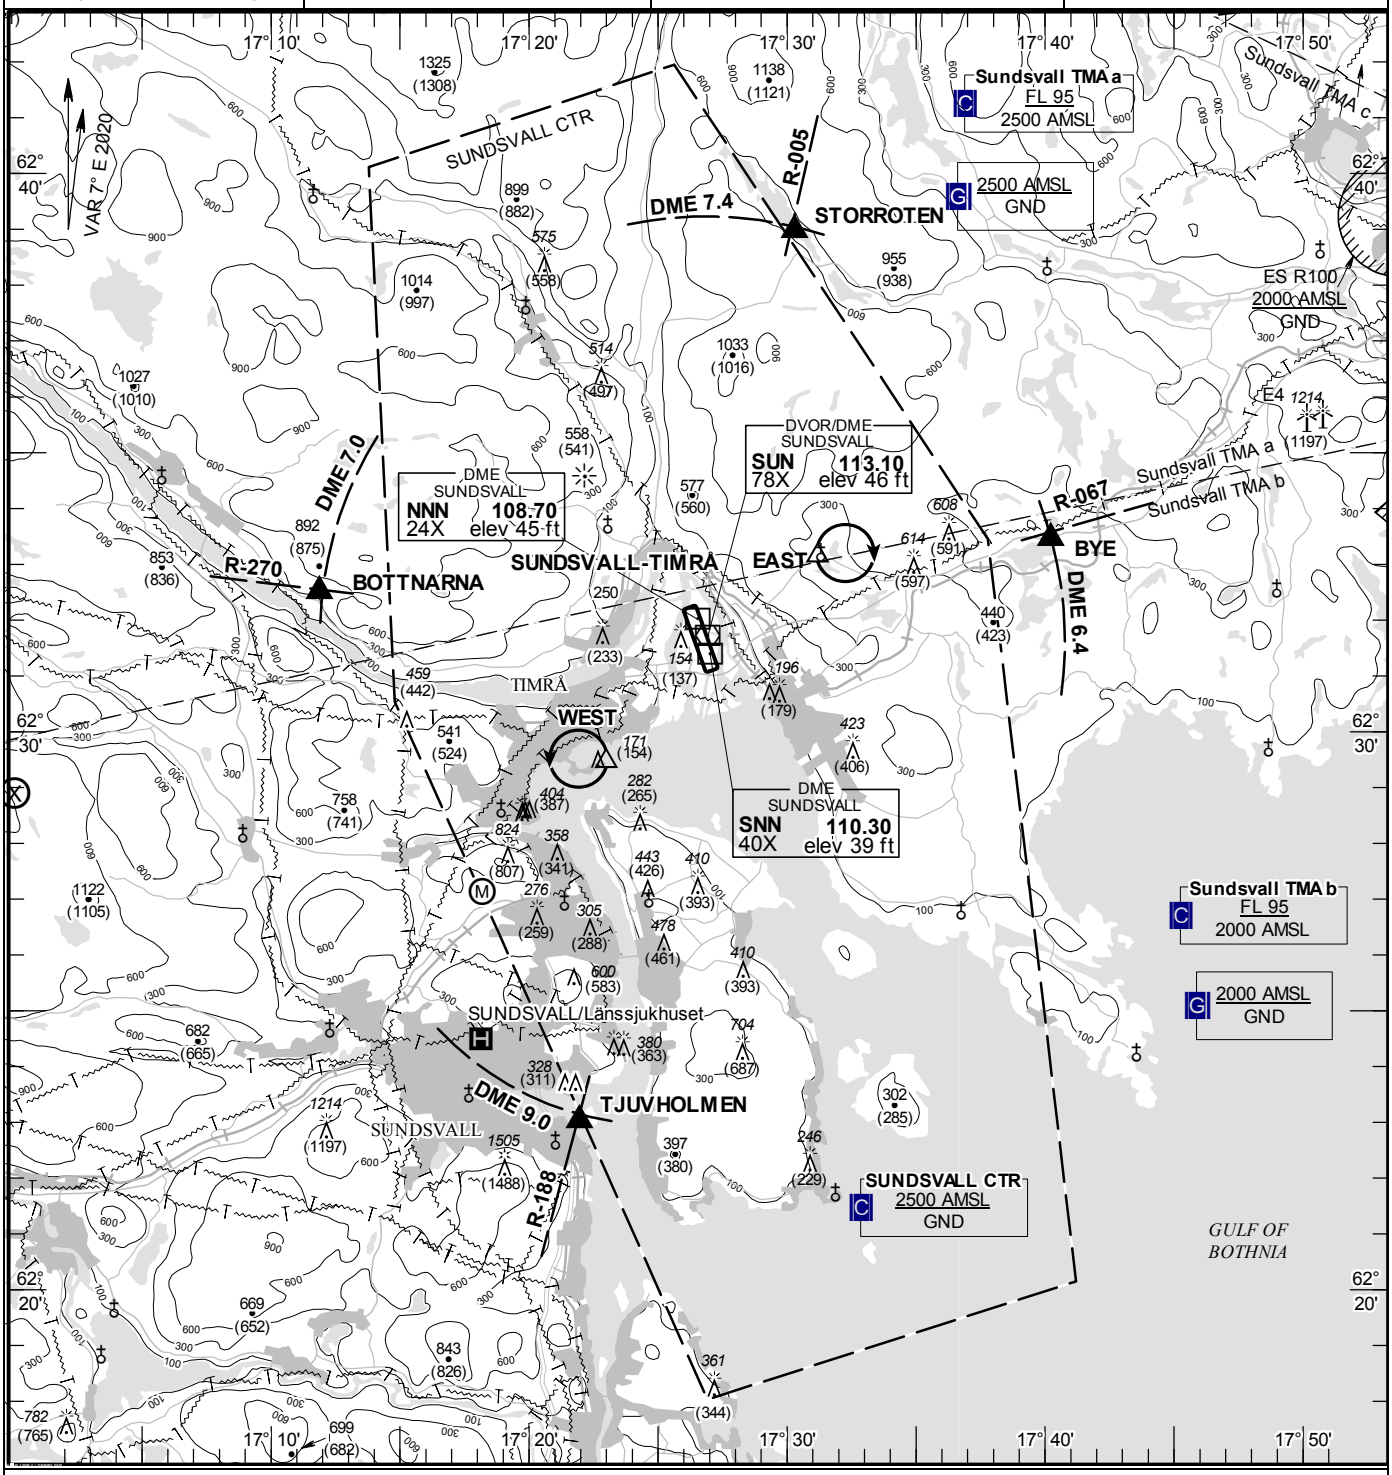

Communication failure

1. SQUAWK 7600
2. Contact TWR on TEL +46 (0)60 64 62 08 for clearance.
3. If telephone contact cannot be established, enter CTR via BYE to holding EAST.
4. Hold in EAST 5 min and flash with landing lights and wait for optical signals from R-TWR.
5. If optical signals cannot be perceived, start APCH via overhead to RWY of choice.
6. Confirm RWY free.
7. Land and taxi via TWY D to apron S.

RWY NR	THR ELEV	PAPI (MEHT)
16	17.1 ft	Left/3.25° (60 ft)
34	13.3 ft	Left/3.00° (57 ft)

Legend

See GEN 2.3

Remark

Model flying area over Öråker

Entry / exit point

STORROTEN	623858N 0173017E
BYE	623327N 0174013E
TJUVHOLMEN	622301N 0172157E
BOTTNARNA	623230N 0171152E

Holding

EAST: Hold at Hässjö church, east of point 623308N 0173112E

WEST: Hold west of Vivstavarv, west of point 622927N 0172258E